

cressi.com

NEWTON QUICK REFERENCE CARD

This document is only a quick reference guide. Cressi recommends you read the whole instruction manual supplied with your computer.

CRESSI

NEWTON WATCH BUTTONS

CRESSI

LIGHT BUTTON:

- 1- PRESS TO TURN ON THE LIGHT
- 2- PRESS AND HOLD FOR 4 SECS. TO SHUTDOWN COMPUTER

To extend battery life it is recommended you turn off the computer if you do not use it.

MODE BUTTON:

- 1- PRESS TO ENTER THE MENU
- 2- PRESS AND HOLD FOR A MOMENT TO EXIT FROM THE MENU
- 3- PRESS AND HOLD FOR 4 SECS. TO ACCESS THE DIVE COMPUTER



DOWN BUTTON:

- 1- PRESS TO SCROLL DOWN THROUGH MENUS
- 2- PRESS TO DECREASE VALUES

UP BUTTON:

- 1- PRESS TO SCROLL UP THROUGH MENUS
- 2- PRESS TO INCREASE VALUES

NEWTON WATCH DISPLAY

CRESSI



TIME DISPLAY



TIME DISPLAY
LOCKED DIVE COMPUTER



TIME DISPLAY + SECONDS



TIME DISPLAY + DATE



TIME DISPLAY + CHRONO MENU



DUAL TIME



TIME DISPLAY + ALARM ON



TIME DISPLAY + ALARM OFF



TIME DISPLAY + SET TIME MENU



TIME DISPLAY + ENTER DIVE MENU



TIME DISPLAY + SET LOCK MENU

TIME 1:

E1





LONG



LONG

TIME 2:


E2

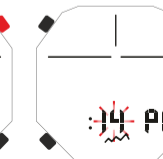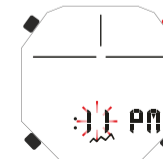

SAME WAY TO
SET 12/24H OR
DATE

SET TIME : ALARM SET

CRESSI

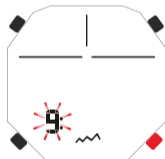



TIME DISPLAY + CHRONO



READY CHRONO



CHRONO ON



CHRONO SPLIT TIME



3" BEFORE CHRONO SPLIT TIME



CHRONO STOP



CHRONO SPLIT TIME 1




CHRONO SPLIT TIME 2...20



CHRONO RESET

LONG

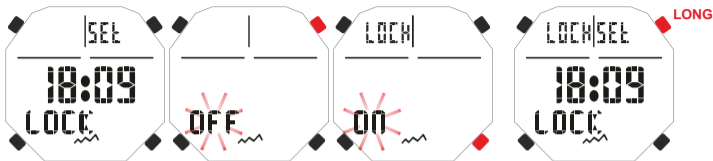

WHY LOCK DIVE COMPUTER WHEN YOU DO NOT DIVE:

- 1- TO AVOID DIVE FUNCTION ACTIVATION/DECO CALCULATION WHEN PLUNGING, SWIMMING, SNORKELING OR SIMILAR
- 2- TO SAVE BATTERY



THE UNDERWATER DIVING FUNCTION IS DISABLED IF THE COMPUTER IS LOCKED

1:



TIME DISPLAY + ENTER DIVE MENU



2:




TIME DISPLAY




DIVE COMPUTER MENU SCROLL


CRESSI

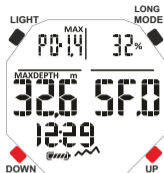

**PRESS THE RIGHT
OR LEFT BUTTONS
AT THE BOTTOM
TO SCROLL DIVE
MENUS**

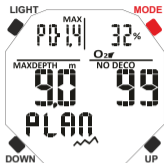

**PRESS THE TOP RIGHT
BUTTON TO ENTER
DIVE MENU**

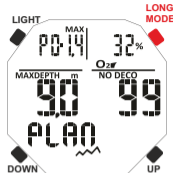

**PRESS AND HOLD
THE TOP RIGHT
BUTTON FOR A
MOMENT TO EXIT
FROM THE MENU**

8 MENUS:

**LOG-23
MODE-5
DIVE-5
PLAN**

**LOGBOOK MENU
MODE SET MENU
DIVE SET MENU
PLAN MENU**

**GAGE
PC LINK
HIST.
SYSTEM**

**GAGE MENU
PC LINK MENU
HISTORY MENU
SYSTEM MENU**

PRE DIVE DISPLAY

CRESSI

(PO2)
O2 PARTIAL
PRESSURE



(FO2)
AIR / %MIX

SELECTED
SAFETY
FACTOR

SELECTED
ALTITUDE

LIGHT: ♦



DIVE DISPLAY

MAX
DEPTH



DIVE TIME
CNS

NO
DECO
TIME


TEMPERATURE

SELECTED
MAX PO2

MAX
DEPTH

(Fo2)
AIR / %MIX

SELECTED
SAFETY
FACTOR

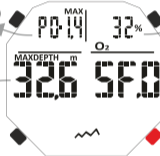

SURFACE POST DIVE DISPLAY

SURFACE
TIME



NO FLY
TIME

DIVE
WITH
DECO

LAST DIVE
MAX DEPTH

DESAT
23:53



NO FLY
TIME


TIME DISPLAY



LOGBOOK MENU: SCROLL AND VIEW DIVES

CRESSI

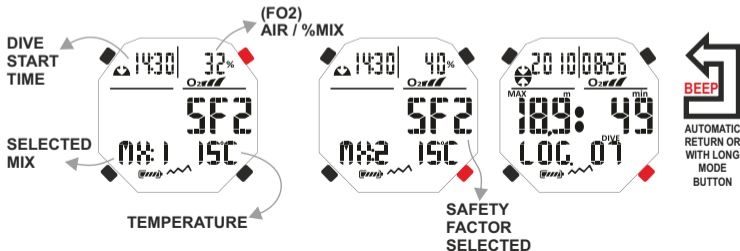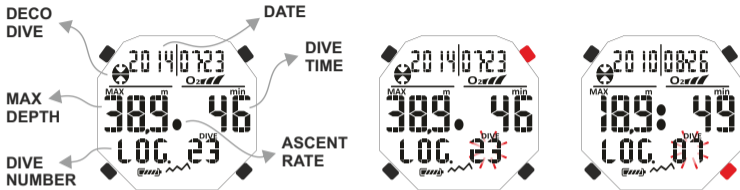

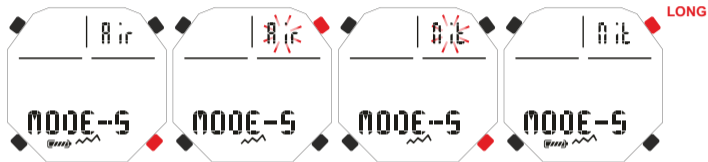

GO TO DIVE SET MENU (DIVE-S) TO INPUT MIX SETTINGS

DIVE SET MENU: MIX1 PO2 SETTINGS

CRESSI



DIVE SET MENU: MIX2 PO2 SETTINGS

CRESSI



DIVE SET MENU: MIX1 FO2 SETTINGS

CRESSI



DIVE SET MENU: MIX2 FO2 SETTINGS

CRESSI



AUTOMATIC
RETURN OR
WITH LONG
MODE
BUTTON

DIVE SET MENU: SAFETY FACTOR SETTINGS

CRESSI



DIVE SET MENU: DEEP STOP ON/OFF

CRESSI




BEEP

AUTOMATIC
RETURN OR
WITH LONG
MODE
BUTTON

DIVE SET MENU: ALTITUDE SETTINGS

CRESSI

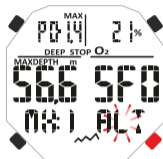


BEEP

AUTOMATIC
RETURN OR
WITH LONG
MODE
BUTTON

PLAN MENU: NO DECO LIMITS

CRESSI

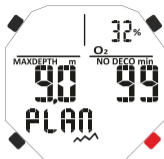

BEEP

AUTOMATIC
RETURN OR
WITH LONG
MODE
BUTTON

GAGE MENU: GAGE ON/OFF



LONG



BEEP

AUTOMATIC
RETURN OR
WITH LONG
MODE
BUTTON



THE LETTER «G» IS DISPLAYED
WHEN GAGE IS ON



DANGER:

DO NOT RESET YOUR DEVICE IF IT HAS TO BE USED TO CALCULATE REPETITIVE DIVES!



AUTOMATIC
RETURN OR
WITH LONG
MODE
BUTTON

DIVE: MIX SWITCHING

CRESSI



LONG




LONG

DIVE: GAS DISPLAY



LONG

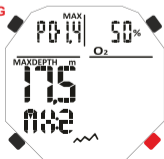

SAFETY STOP WARNING



PRE-DECO WARNING



DEEP STOP WARNING



DECO WARNING



OMITTED DECO STOP WARNING




IF LESS THAN
STOP DEPTH


ASCENT RATE



LIGHT

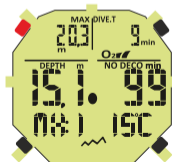

CNS OXYGEN TOXICITY

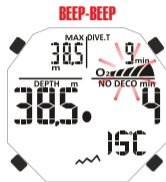

PO2

